TP-1201

12-CHANNEL TOUCH CONTROL PANEL


(WITH CHASE FUNCTION)

MAIN FUNCTIONS:

- 12CH 24 TOUCH SENSORS.
- FLASH AND HOLD MODES.
- 3 SETS OF SYNCHRONOUS OR RANDOM CHASE CONTROLS THAT CAN BE INDIVIDUALLY OPERATED.

- American DJ®
- CHASE SPEED CONTROL.
- AUDIO SELECT INTERNAL OR EXTERNAL.

GENERAL FUNCTIONS (FRONT):

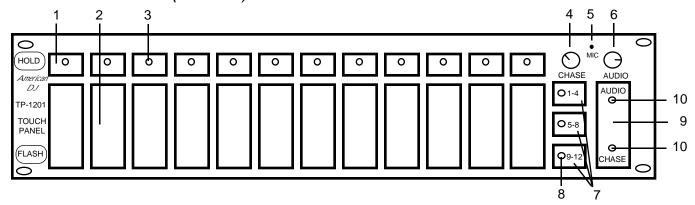


- HOLD MODE: Touch to turn channel on, Touch again to turn channel off.
- 2. FLASH BUTTON: Holds channel on while touching it.
- 3. CHANNEL INDICATOR LED: Indicates selection.
- 4. CHASE: Adjusts chase speed.
- 5. MIC: Internal microphone.
- 6. AUDIO: Audio sensitivity.

- 7. 1-4: Selects channels 1-4 to chase.
 - 5-8: Selects channels 5-8 to chase.
 - 9-12: Selects channels 9-12 to chase.
- 8. CHASE INDICATOR LED: Indicates selection.
- AUDIO/CHASE: Push audio to select audio sensitive mode, push chase to select chase mode.
- 10. AUDIO/CHASE INDICATOR LED:

Indicates selection.

GENERAL FUNCTIONS (BACK):

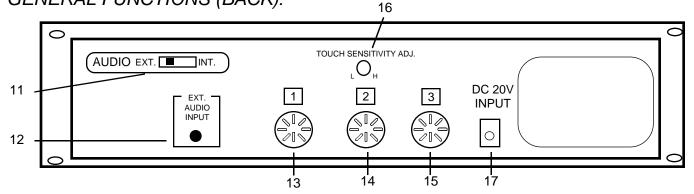

- 11. AUDIO EXT./INT. SWITCH:
 - Select ext. to use the external audio line input jack, Select int. to use with internal microphone.
- 12. EXT. AUDIO INPUT: RCA jack to acommidate external connection for audio line input.
- 13. 8 PIN SIGNAL OUTPUT JACK FOR CHANNELS 9-12.
- 14. 8 PIN SIGNAL OUTPUT FOR CHANNELS 5-8.
- 15. 8 PIN SIGNAL OUTPUT FOR CHANNELS 1-4.
- 16. TOUCH SENSITIVITY ADJ. POT: To adjust hold and flash pads on panel.
- 17. DC 20V INPUT: To use external power supply.

TP-1201

American DJ®


SPECIFICATIONS:

1. POWER INPUT: DC +20V.


2. SIGNAL OUTPUT: "ON DC +10V; "OFF" DC +0V

3. WEIGHT: 29 oz.


4. DIMENSION: (unit:inches)

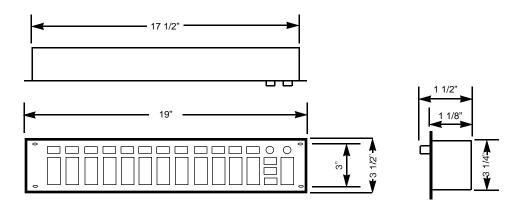


CONNECTIONS:

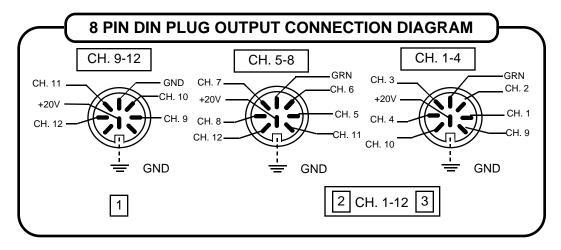

CONNECTED TO POWER PACK:

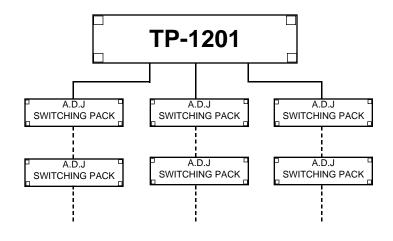

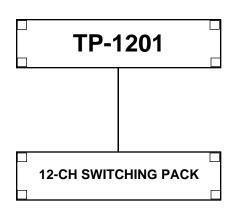

TP-1201 Instructions page 2 of 2